



www.click-watch.com

Demo Scrolling :

- Press key A to scroll 3 cycles of the digits.

Power Saving Mode :

- Press key B quickly for three times, the digits will move and stop at 12:00.
- To exit the Power Saving Mode, press any key to activate the watch again.
- The battery consumption in the Power Saving Mode is very small. User will not use the watch for a while can store in this mode.

Remarks :

- If any key is pressed or hold accidentally, the digit(s) may be changed. If that happen, please go to the time setting or go through the Calibration paragraph if time setting cannot move the digit(s) to the correct position(s).

How to set time :

- Press and hold key C for 2 seconds to go into Time Setting Mode and the Hour digit will start increasing.
- Press key C to increase the Hour digit
- Press key B to increase the 10X minute digit
- Press key A to increase the 1X minute digit
- To confirm the time, press key D or wait 15 seconds to exit the Time Setting Mode

Calibration :

- If after some times of using, due to battery low or some possible shock against the watch, the digit may not be moving back to proper position. Then, we will need to calibrate the watch.

- Press key D and hold for 3 seconds, all 3 digits will scroll to a random location.
- Press key C will move the Hour digit a little bit, hold the key C will move the Hour digit more. Increase the Hour digit to 12.
- Press key B will move the 10X Minute digit a little bit, hold the key B will move the 10X Minute digit more. Increase the 10X Minute digit to 0.
- Press key A will move the 1X Minute digit a little bit, hold the key A will move the 1X Minute digit more. Increase the 1X Minute digit to 0.
- After the time set to 12:00, press key D to confirm the calibration function or wait for 15 seconds to exit the calibration mode.
- After calibrated the watch, you may start over to set the correct time as in How to set time paragraph.

Battery replacement :

- 2 LR44 (or AG13) batteries provides the power to operate the watch
- If you notice your watch digits sometimes not moving properly, that may be the batteries need to be replaced.
- Do not wait until your watch stops functioning
- Weak or dead battery left in your product for an extended time may damage the movement
- To avoid the possibility of damaging your product, we recommend that you send it to watch specialist to have the battery replaced and the case back properly sealed

Cautions :

- Don't press buttons under water nor with excessive moisture on the product surface.
- Avoid long-term exposure to extreme temperature, direct sunlight. This can cause material coloring to fade or discoloration.
- Please avoid rough use or dropping this product. Do not use strong detergent, sprays or chemicals as this will dis-color the case or strap.
- To clean your watch use only soft cloth, moistened lightly.