 



CLICK WALLSM Watch

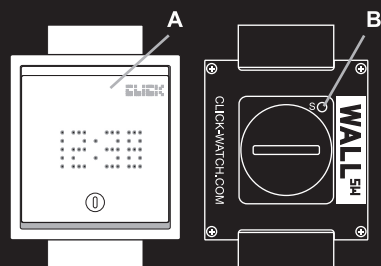

Switch A - Time/Date
Key B - Set Time/Date

How to see Time :

 
- Press Switch A once will see animation for a few seconds. After the animation, the time mode will be displayed.

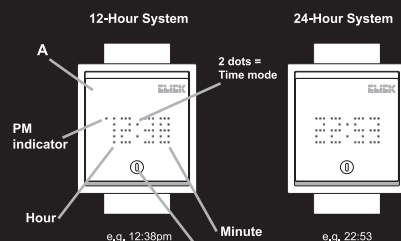

This LED is blinking during animation.
After animation, it will be OFF in time mode.

How to see Date :

 - When the time is still light up, press Switch A once will see animation for a few seconds. After the animation, the date mode will be displayed.

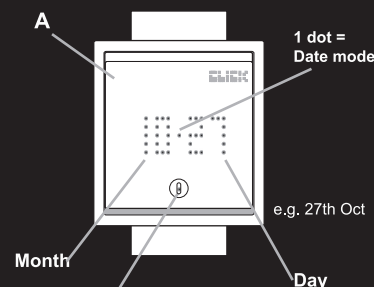

This LED is blinking during animation.
After animation, it will be ON in date mode.

How to set the time :

- Press switch A to light up TIME first. Before LED off, press and hold Key B for about 2 seconds will go into time setting mode. 12H or 24H will be blinking if you successfully go into setting mode.
- Press switch A to toggle between 12/24 Hour system. Press Key B to confirm and go to Hour setting.
- During Hour setting, press switch A to increase the hour. Press Key B to confirm and go to Minute setting.
- During Minute setting, press switch A to increase the minute. Press Key B to confirm and exit time setting.

Remarks :

- During Hour/Minute setting, if no key has been pressed for about 5 seconds, it will exit Time setting.

How to set the date :

 
- Press switch A twice to light up DATE first. Before LED off, press and hold Key B for about 2 seconds will go into date setting mode. day will be blinking if you successfully go into setting mode.
- During Day setting, press switch A to increase the day. Press Key B to confirm and go to Month setting.
- During Month setting, press switch A to increase the month. Press Key B to confirm and exit date setting.

Remarks :

- During Time/Date setting, if no key has been pressed for about 5 seconds, it will exit Time/Date setting.

Changing CR2032 Battery :

- Please put the negative pole inside.
- The positive pole should be facing up touching the battery door.

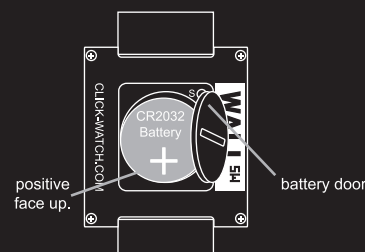


Battery replacement

- One Lithium battery CR2032 provides the power to operate the lights
- If you notice your watch's light is getting dimmer, this is an indication that your battery needs to be replaced
- Do not wait until your watch stops functioning
- Weak or dead battery left in your product for an extended time may damage the movement
- To avoid the possibility of damaging your product, we recommend that you send it to watch specialist to have the battery replaced and the case back properly sealed

Cautions

- Don't press buttons under water nor with excessive moisture on the product surface.
- Avoid long-term exposure to extreme temperature, direct sunlight. This can cause material coloring to fade or discoloration.
- Please avoid rough use or dropping this product. Do not use strong detergent, sprays or chemicals as this will dis-color the case or strap.
- To clean your watch use only soft cloth, moistened lightly.

 Instruction Manual

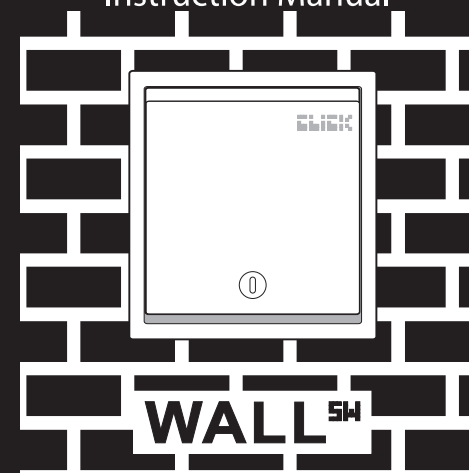

www.click-watch.com