


KEYPAD Watch

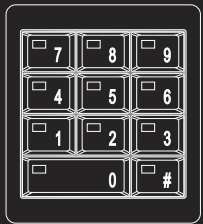

- FEATURES :**
- 12/24 hour system
 - Date

How to see Time in 12-hour system :

- Press any number key 0 to 9 to see Time
e.g. 0 , 9 , 1 , 5 means 09 : 15.




How to see Time in 24-hour system :

- Press any number key 0 to 9 to see Time
e.g. 2 , 1 , 1 , 5 means 21 : 15.



How to change between 12 or 24-Hour System:

- Press and hold key "0" & "8" for about 2 seconds will change the 12/24 hour system.

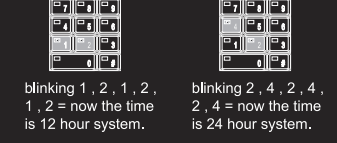

How to see Date :

- Press # key to see Date : # light on = DATE display
e.g. 0 , 7 , 2 , 4 means July 24th.



How to set the time in 24-Hour System:

- Press and hold Key # and 9 for about 2 seconds, it will go to SET Time Mode. (the # light will be blinking).
- Press 4 digits, the first 2 digits will be Hours and the 3rd and 4th digits will be Minutes.
e.g. press 2359 = 23:59, i.e. 23 hours 59 minutes.
- Press Key # as "enter" to jump to Date Set (you will see the blinking of # light is quicker. This is now at the Date Set mode).
- Press 4 digits, the first 2 digits will be Month and the 3rd and 4th digits will be Day-of-Month.
e.g. press 0915 = Sep 15th
- Press Key # as "enter" to finish Setting (you will see the # light is not blinking.)

How to set the time in 12-Hour System:

- Press and hold Key # and 9 for about 2 seconds, it will go to SET Time Mode. (the # light will be blinking).
- If AM, the morning time, press 4 digits, the first 2 digits will be Hours and the 3rd and 4th digits will be Minutes.
e.g. press 0823 = 08:23am
- If PM, the afternoon time, press "7" then press 4 more digits :
e.g. press 70823 = 08:23pm
- Press Key # as "enter" to jump to Date Set (you will see the blinking of # light is quicker. This is now at the Date Set mode).
- Press 4 digits, the first 2 digits will be Month and the 3rd and 4th digits will be Day-of-Month.
e.g. press 0915 = Sep 15th
- Press Key # as "enter" to finish Setting (you will see the # light is not blinking.)

* Remarks :

- During Hour/Minute/Month/Day setting, any wrong button pressed, you may repeat pressing the correct digits again. The watch will only record the last 4 digits you entered. After correctly pressed, then press Key # to the next step. If the Time or Date entered are not a valid time nor date, the watch will neglect it and use your previous time/date.

To exit Time Setting Mode :

- To finish time setting, you may press Key # as "enter" or wait about 4 seconds without pressing key, it will automatically exit Time Setting mode.

Battery replacement



- One Lithium battery CR2032 provides the power to operate the lights.
- If you notice your watch's light is getting dimmer, this is an indication that your battery needs to be replaced.
- Do not wait until your watch stops functioning.
- To avoid the possibility of damaging your product, we recommend that you send it to watch specialist to have the battery replaced and the case back properly sealed.

Cautions

- Don't press buttons under water nor with excessive moisture on the product surface.
- Avoid long-term exposure to extreme temperature, direct sunlight. This can cause material coloring to fade or discoloration.
- Please avoid rough use or dropping this product. Do not use strong detergent, sprays or chemicals as this will discolor the case or strap.
- To clean your watch use only soft cloth, moistened lightly.

Please measure your wrist circumference and check below table to cut accordingly.

wrist circumference (inch)	wrist circumference (mm)	Cut out lower strap	Cut out upper strap
7.80-8.39	198-213	No need to cut	No need to cut
7.40-7.79	188-197	A	W
7.01-7.39	178-187	A	W
6.61-7.00	168-177	A+B	W
6.22-6.60	158-167	A+B	W-X
5.83-6.21	148-157	A+B+C	W-X
5.43-5.82	138-147	A+B+C	W+X+Y
4.84-5.42	123-137	A+B+C+D	W+X+Y
4.33-4.83	110-122	A+B+C+D	W+X+Y+Z

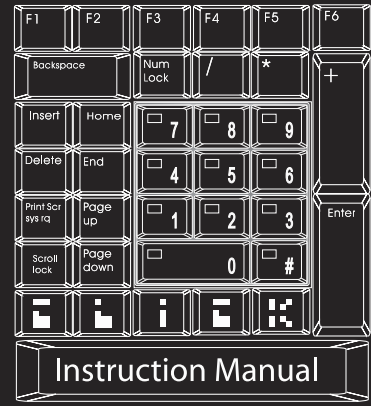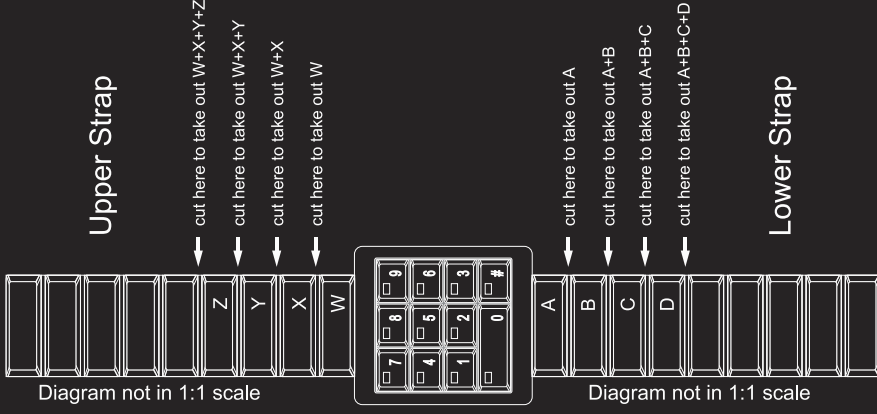

Instruction Manual